

# Installation instructions

## Content:

- I. System requirements
- II. Program installation
- III. Program registration
- IV. Contact

## I. System requirements

	Minimum	Suggested
CPU	1,4 GHz	Intel® Core™ 2 Duo
RAM	512 MB	2 GB
Viewscreen	19"	21"
Hard disk	400 MB	
Operating system	Windows XP (at least SP 2), Vista or Win 7	

*Before you start with Vogel & Noot program installation, please check necessary computer configuration and close all running programs.*

*Warning!*

*If you have **Windows XP** please check if you have at least **Service Pack 2** installed.*

*(My Computer – Control Panel – System – Service Pack no.)*

*If you do not have at least the Service Pack 2 for Windows XP you can install it from here:*

**Service pack 2:**

<http://www.microsoft.com/downloads/details.aspx?familyid=049C9DBE-3B8E-4F30-8245-9E368D3CDB5A&displaylang=en>

**or Service pack 3:**

<http://www.microsoft.com/downloads/details.aspx?FamilyId=5B33B5A8-5E76-401F-BE08-1E1555D4F3D4&displaylang=en>

## II. Program installation

### **Step 1 – download program**

### **Step 2 – install program**

### **Step 1 – download program**

From link download IntegraCAD Vogel & Noot installation program.

- first download the .zip file on your computer (e.g. on your desktop)
- then from .zip file extract the IntegraCAD Vogel & Noot Setup.exe (also e.g. on your desktop)

### **Step 2 – install program**

Run IntegraCAD Vogel & Noot Setup.exe

*Warning!*

If you cannot run IntegraCAD Vogel & Noot Setup.exe then please download and install **dotnetfx35.exe**. from the following link:

<http://www.microsoft.com/downloads/details.aspx?FamilyID=AB99342F-5D1A-413D-8319-81DA479AB0D7&displaylang=en>

After the dotnetfx35 installation is complete, restart the IntegraCAD Vogel & Noot Setup.exe.

Follow the instructions shown on the screen.

Short program installation description:

- 1.) extraction files window - (will last for a few seconds)
- 2.) language selection - (select installation language, and press **OK** button to continue installation)
- 3.) welcome window - (press **Next** button to continue installation)
- 4.) licence agreement window – (press **Yes – I Accept the terms of the Licence Agreement** button, and then press **Next** button to continue installation)
- 5.) User information window – (type your name and the name of the company you work for, and then press **Next** button to continue installation)

- 6.) Choose Destination Location window – *(we recommend to permit the program to install his components to his offered directory in that case just press **Next** button to continue instalation, if you want to install program to some different directory press Browse button - select another directory, and than press **Next** button to continue instalation)*
- 7.) Set file Association window – *(press **OK** button to continue instalation)*
- 8.) Set program shortcuts window – *(beside the one that program will automatically add on your Start/Program menu, you may add some other shortcuts, press **Next** button to continue instalation)*
- 9.) Confirm setup settings window – *(press **Next** button to continue instalation)*
- 10.)first setup program will install Redist\_pack components *(it can take a few minutes)*
- 11.)and then will install RAUinteg program *(it can take a few minutes)*
- 12.) Setup Complete window – *(press **Finish** button to complete program installation)*


After the succellfull installation of the program you can proceed with the obtaining the licence code for the program (see next chapter - program registration).

### III. Program registration

Run program by clicking on Start -> Programs -> IntegraCAD Vogel & Noot

*You can also start the program by doubleclicking the program shortcut icon on your desktop (if you have it) - depends if you set that option during program installation – see point 8.) Set program shortcuts window, from the previous chapter - " Short program installation description".*

If everything is alright you should be able to see a window in the middle of your screen with your Serial Number and Program Version Label.

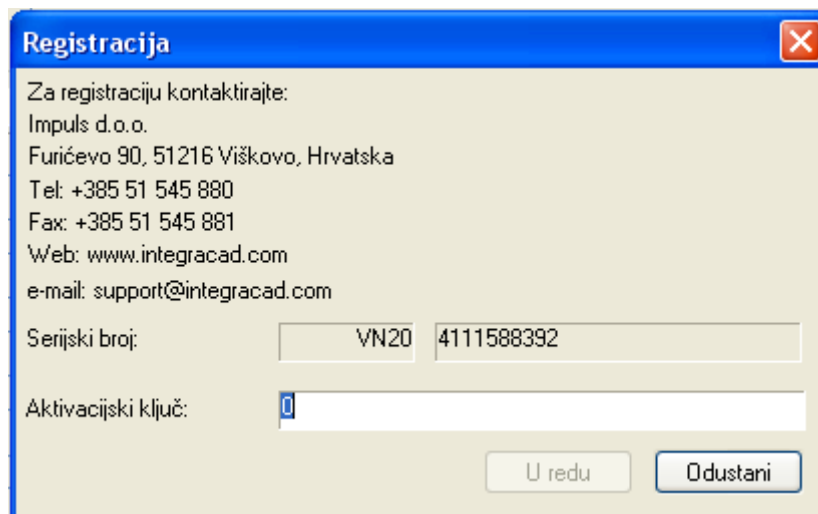

**Registracija**

Za registraciju kontaktirajte:  
Impuls d.o.o.  
Furićevo 90, 51216 Viškovo, Hrvatska  
Tel: +385 51 545 880  
Fax: +385 51 545 881  
Web: www.integracad.com  
e-mail: support@integracad.com

Serijski broj: VN20 4111588392

Aktivacijski ključ: 0

U redu Odustani

*This serial number is your private number and it allows you to use the program.*

To get the activation key you must contact Impuls ing d.o.o. (see chapter IV. *Contacts*); and supply them with exact information program name, its Version label and the Serial Number (e.g. IntegraCAD Vogel & Noot, VN20, 4111588392).

Type the activation key in the required spot (*delete the zero*). If everything was fine you'll see the button OK activated and be able to start working.

You need to type the activation key only once; at all other times the program will run without asking this information. (*unless you install some new operating system, or install program on some other computer*).

## IV. Contacts

We thank you for using our software.

If you need help or have suggestions or improvement requests do not hesitate to contact us:

**Adress:**

Impuls ing d.o.o.  
Furićevo 90  
HR - 51216 Viškovo  
Croatia  
Europe

**tel.** +385 51 545 880

**fax.** +385 51 545 881

**e-mail:**

**Activation key:**

[tina@integracad.com](mailto:tina@integracad.com)

**General information**

[info@integracad.com](mailto:info@integracad.com)

**Technical support**

[support@integracad.com](mailto:support@integracad.com)

**Website**

[www.integracad.com](http://www.integracad.com)