

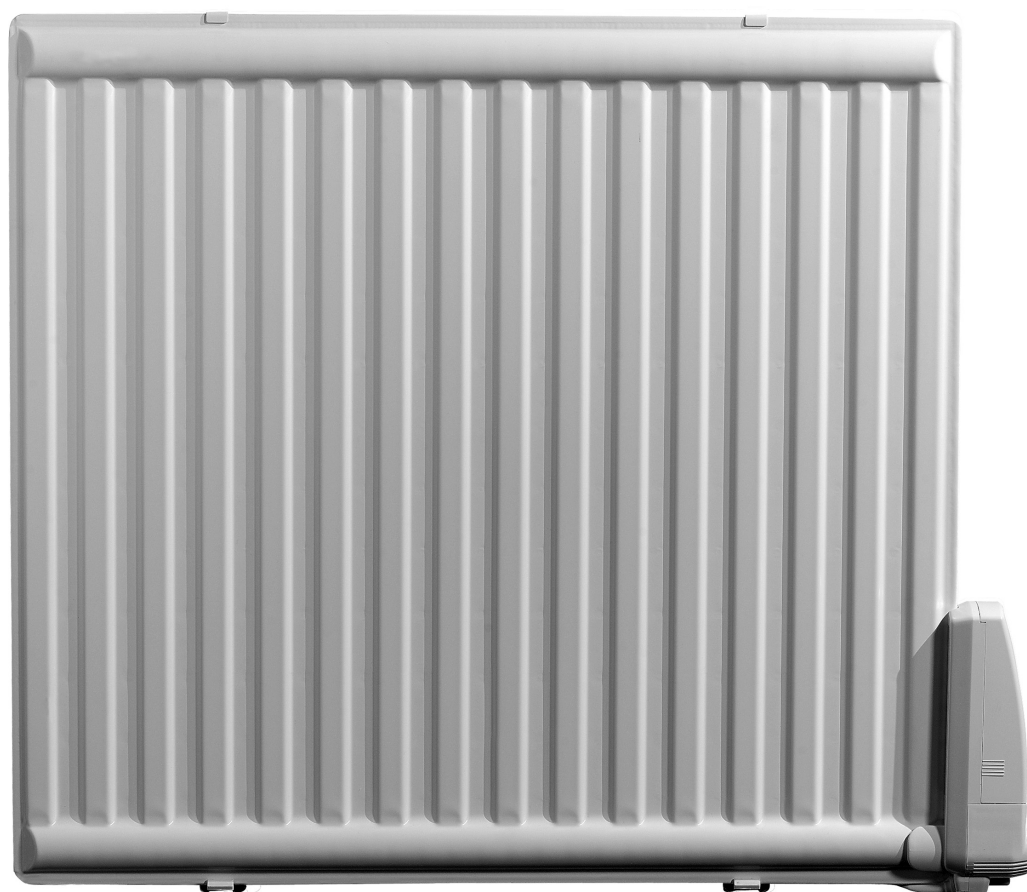
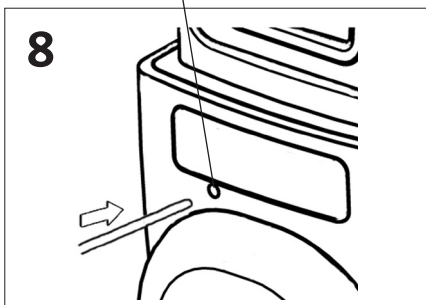
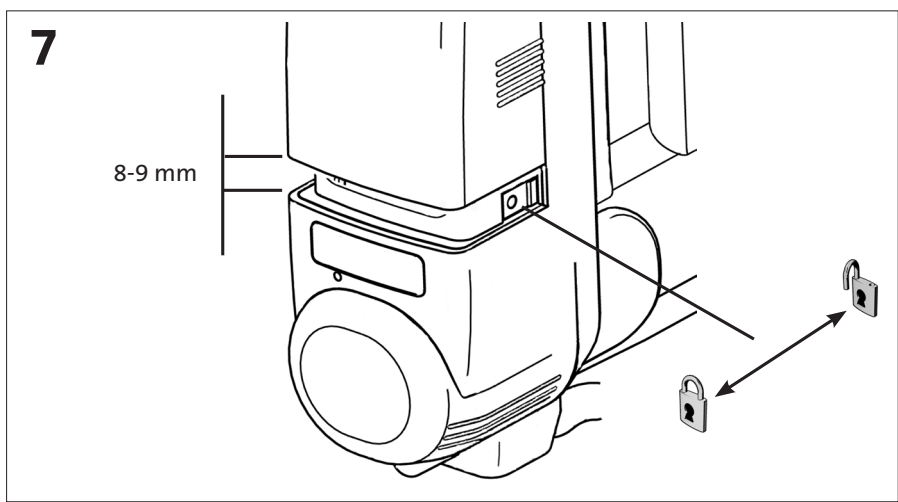
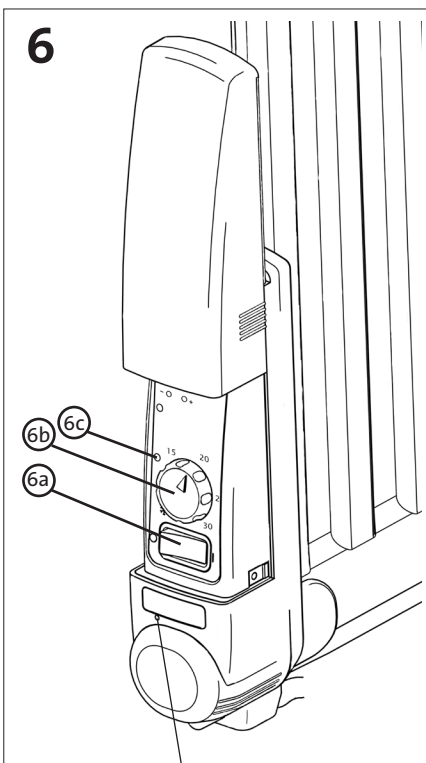
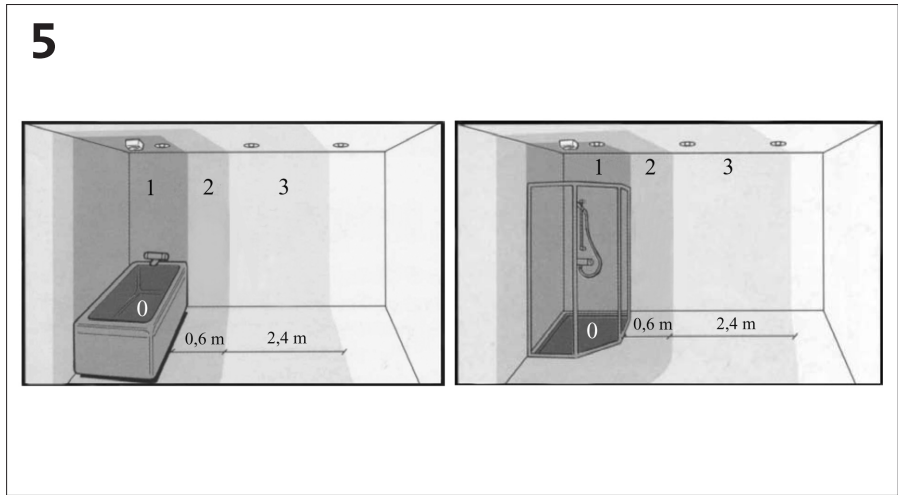
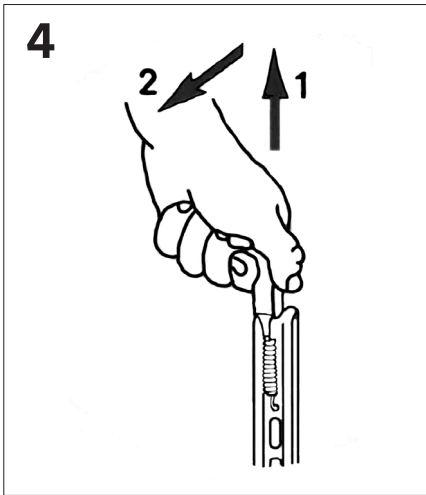
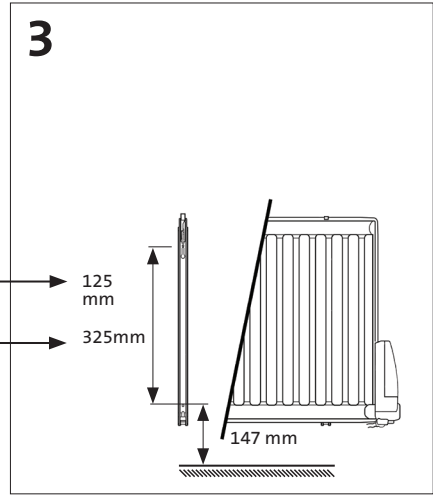


# FINESSE

Oil-filled electric radiator with electronic thermostat

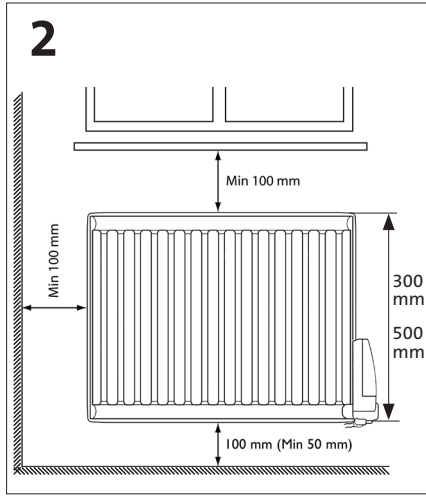

INSTALLATION AND OPERATING INSTRUCTIONS

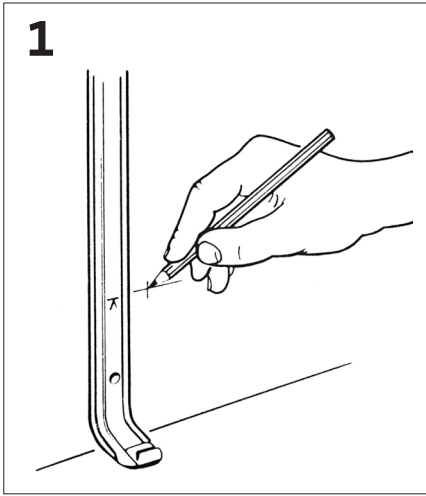

## ***Congratulations on the purchase of your new Myson Finesse!***

Myson Finesse Electric panel for wall mounting fitted with electronic thermostat. Supplied with connecting cable, wall brackets and screws.  
Rated voltage 240V.  
IP 44.

### **INSTALLATION**

#### **MOUNTING**

Fig. 1.

The supplied wall brackets are mounted on wall with enclosed screws. The brackets should be placed approx. 100–150 mm in from each end of the radiator. The brackets can be used to mark out the height.

Fig. 2, 3.

Note! The specified minimum measurements to floor, window sill and side wall must be observed. The measurement in fig. 3 between floor and lower fixing hole gives a distance of 100 mm between the floor and lower edge of the radiator. For the radiator to function correctly it must be mounted level.

Fig. 4.

The top of the wall brackets can be pulled up and locked in their top position to simplify the mounting of the radiator. Make sure when locking the radiator in the brackets that the upper part of the brackets properly grip the edge of the radiator.

The radiator is reversible. The thermostat housing should always be at the bottom, closest to the floor. The radiator must not be placed immediately under a wall socket.

#### **ELECTRICAL**

Connect the radiators 3-core cable to a suitable terminal box as follows:

Brown wire	Live
Blue wire	Neutral
Green/yellow wire	Earth

This appliance must be connected to the fixed wiring of the premises through a cable outlet (5 Amp max).

For installation in a bathroom (to comply with current I.E.E regulations) the appliance must be wired in the manner prescribed via a double-pole switch having a contact separation of at least 3mm in all poles, mounted outside the bathroom. This radiator should be mounted in zone 3 of the bathroom (fig. 5).

#### **WARNING**

THIS APPLIANCE MUST BE EARTHED through the medium of the 3 core connection cable.

This radiator should be fitted by a competent electrician.

### **HOW TO USE**

Fig. 6.

The radiator is switched on by setting the switch to position I, see fig. 6a. The required room temperature is set with the thermostat dial, see fig. 6b. The green indicator lamp is on when the radiator is emitting heat, see fig. 6c.

Fig. 7.

The radiator is provided with a lockable panel. It can be locked by moving the catch as per fig. 7.

Fig. 8.

The radiator is provided with an overheating device, which disconnects the power if it becomes too hot, e.g. if covered. To reset, push in the reset button in the hole under the Myson plate on the thermostat housing, see fig. 8. If tripping continues check that no parts of the radiator are covered. Otherwise contact your supplier.

#### **MAINTENANCE**

When cleaning or wiping, only use mild detergent.

#### **MISCELLANEOUS**



WARNING - In order to avoid overheating, do not cover the heater. "Do not cover" means that the radiator must not be used for drying clothes etc. by placing them directly on it.

This radiator is filled with a precise amount of special oil, and therefore repairs that need it to be opened must only be carried out by the manufacturer or their service representative. In the event of leakage, contact your supplier or their representative.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

When scrapping the heater, follow the regulations concerning the disposal of oil.

### **AFTER SALES SERVICE**

We guarantee your Myson Finesse for 10 years from date of purchase (except electrical components which are 2 years from date of purchase) and undertake to exchange or repair free of charge within this period any part found to be defective. Should you require after sales service, please complete and return the enclosed warranty and care card.



#### **WASTE DISPOSAL ACCORDING TO THE WEEE DIRECTIVE (2002/96/EC)**

The symbol on the product label indicates that the product may not be handled as domestic waste, but must be sorted separately. When it reaches the end of its useful life, it shall be returned to a collection facility for electrical and electronic products. By returning the product, you will help to prevent possible negative effects on the environment and health to which the product can contribute if it is disposed of as ordinary domestic waste. For information about recycling and collection facilities, you should contact your local authority/municipality or refuse collection service or the business from which you purchased the product. Applicable to countries where this Directive has been adopted.

**SALES AND SERVICE**  
MYSON TOWEL WARMERS  
Eastern Avenue  
Team Valley, Gateshead  
Tyne & Wear, NE11 OPG

Telephone: 0845 4023434  
Fax: 0191 4917568  
Email: [sales@myson.co.uk](mailto:sales@myson.co.uk)  
Website: [www.myson.co.uk](http://www.myson.co.uk)

In accordance with our policy of continual product improvement we reserve the right to amend the specification of these products without prior notification.

